




MPM – Quality v.o.s. Příborská 1473 738 02 Frýdek-Místek C Z E C H R E P U B L I C IČ: 47987430, DIČ: CZ47987430

Phone: +420 558 441 170 E-mail: mpm@mpm-quality.cz www.mpm-quality.com

Instructions for the PRIM inflatable gate

The gate has an internal dimension for passage.

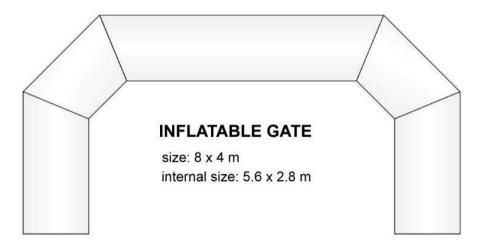

<u>Gateway parameters</u>	Contents of accessories
internal width: 5,6 m internal height: 2,8 m weight: 26,5 kg	1x compressor 220 V/800 W (800 l/min.) + 4x reduction, 1x blow-off valve without return membrane, 4x cord – length 3 m,
Inflating time with the included compressor approx. 15 minutes.	 4x cord – length 5 m, 4x emergency anchoring plastic pin – yellow 15 cm, 16x anchoring steel pin, replacement repair patches in the colour of the gate

Inflation

1. To inflate with a compressor, unscrew the non-return valve and use a tape-wrapped reducer. Just insert it slightly, turn it in the direction of the thread so that the thread is not damaged.



2. To inflate to the required pressure, screw on the non-return valve, for which you will use a reducer.



Deflation

Deflate with a compressor, unscrew the check valve and use a tape-wrapped reducer.

After deflating, fold as shown in the pictures:

